

Hall Effect TPS for PMO Throttle Bodies Installation Instructions



Remove original TPS adapter. It may take a little heat to soften the Loctite. Use a 5/64 Allen wrench.



Install the new TPS drive adapter with included screw and Loctite.



Install the TPS Adapter using the included screws.



Install the TPS sensor using the included screws. Sensor can be mounted pointing inward or outward.



Connector is Pull-to-Seat.

A = 5V, B = Signal, C = Sensor Ground



Completed Installation